


6. Exploded View and Parts List

GXE1395/UCX

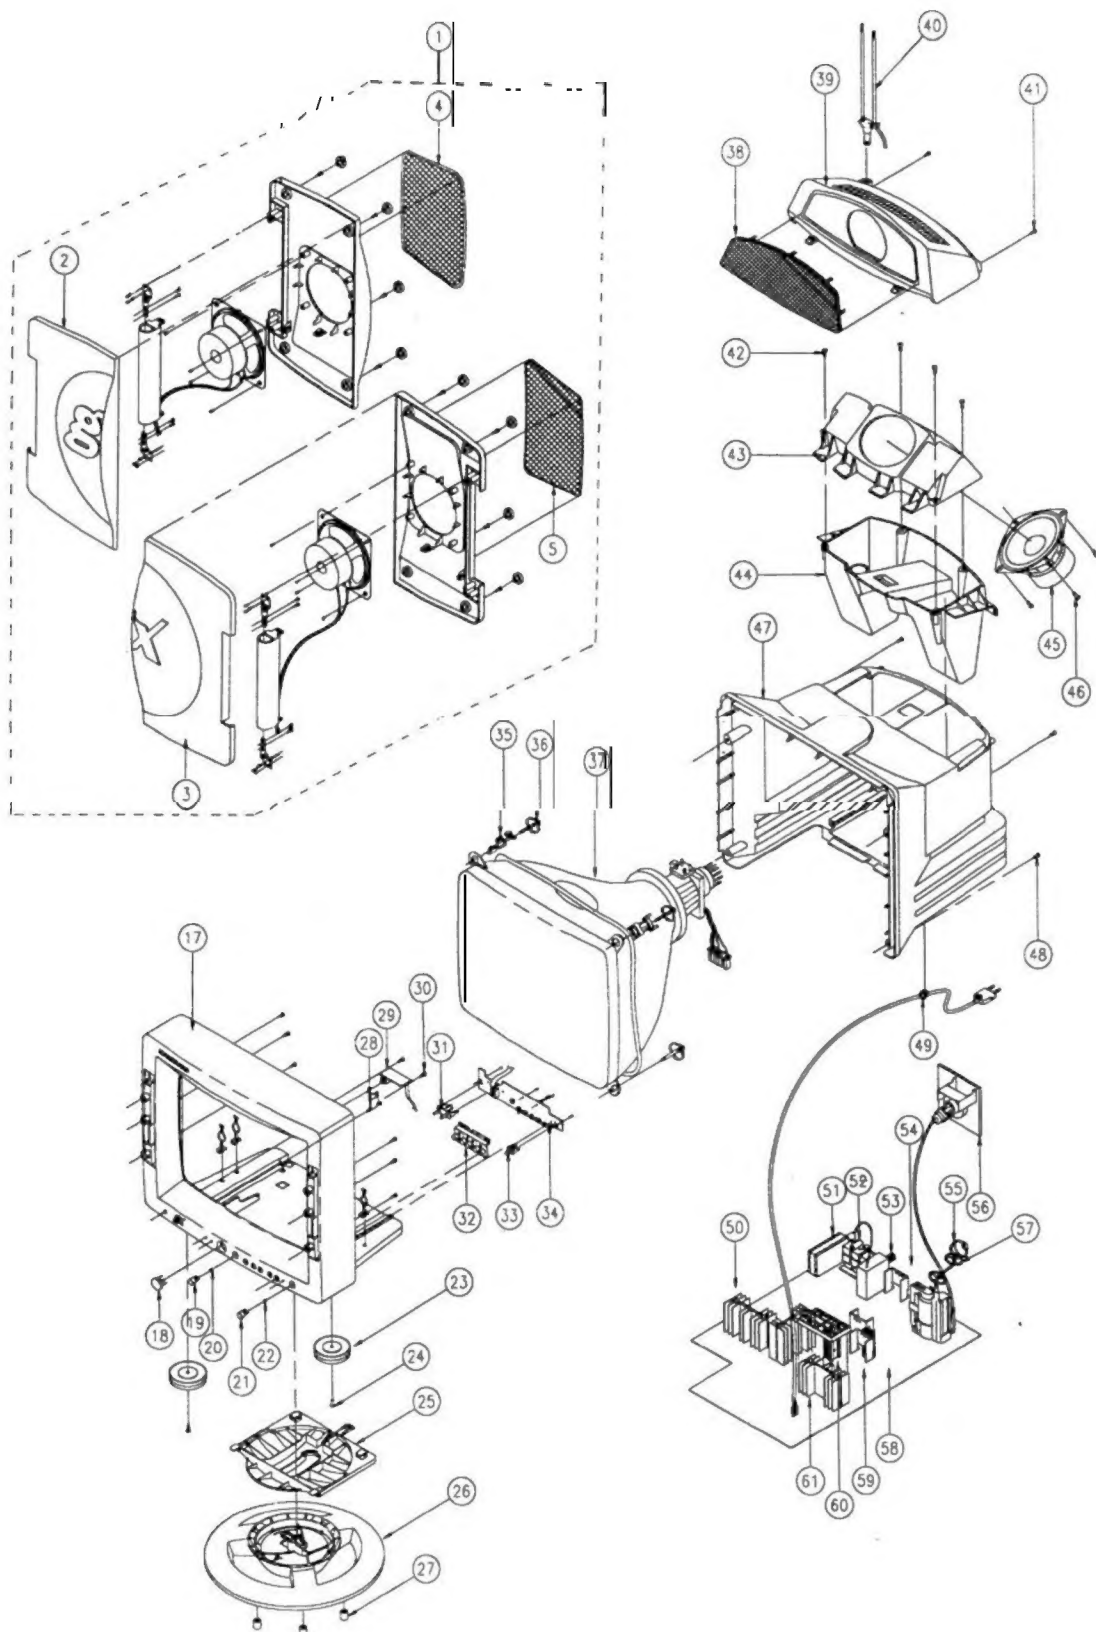

No	New Code No.	Old Code No.	Description	Specification	Qty	Remarks
1	AA92-80101A		ASSY-HOLDER, SPK	DP, ABS, VO, WP100016R5W, TIL	1	
2	AA61-40051A	33093-0016-000	HINGE-ASSY, U	ZUD0BF, 3374G	1	
3	AA61-40050A	33093-0015-000	HINGE-ASSY, R	ZUD0BF, 3374G	1	
4	AA63-50199A	34003-0097-000	GRILLE-WOOFER, U	SECC, T0.5, 3374G	1	
5	AA63-50198A	34003-0096-000	GRILLE-WOOFER, R	SECC, T0.5, 3374G	1	
17	● AA92-30155A		ASSY-CABINET, FRONT	GXE1395/UCX	1	
	AA64-30917A		CABINET-FRONT	DP, HIPS, VO, BLK, WP1000	1	
18	AA64-40253A	34073-0108-000	WINDOW-REMOCON	ABS, HB, 3374G	1	
19	AA64-10364A	34083-0244-000	KNOB- MENU	ABS, HB, BLK, 3374G	1	
20	AA61-60003U	36674-142-920	SPRING- CS	SUS304, 0.4, CD5.5, H12	1	
21	AA64-10363A	34083-0242-000	KNOB-POWER	ABS, HB, BLK, 3374G	1	
22	AA61-60003U	36674-142-920	SPRING- CS	SUS304, 0.4, CD5.5, H12	1	
23	AA64-80020A	33003-0013-000	LEG-BOTTOM	HIPS, VO, BLK, 3374G	2	
24	6002-000507	37148-530-121	SCREW-TAPPING	RH, 2, M4, L12, ZPC(YEL) SW	2	
25	AA61-10362A		BRACKET- STAND	SECC, T1.6, BLK, 3374G	1	
26	● AA91-70055A		ASSY- STAND	DP, AA91-70054A, 3374G	1	
27	AA60-10002A	37144-001-210	SCREW-TAPPING	RH, M4, L12, ZPC(YEL) CO	3	
28	AA61-40053A	33383-0004-000	STOPPER-PCB	HIPS, HB, WHT, ALL, MODEL	1	
29	● AA97-90003A		ASSY-PCB, F/AV	DP, GXE1395/UCX, KG1	1	
30	6002-000514	37148-540-153	SCREW-TAPPING	RH, 2, M4, L15, ZPC(BLK), SW	2	
31	AA59-60002B	A1294-0063	MODULE-REMOCON	ORC---50HF, 38KHZ, 940MM, ME	1	
32	AA64-10616A		KNOB-CONTROL	DP, AA64-10361A, 3374	1	
33	AA64-40257A	34164-0083-000	INDICATOR-LED, S	ABS, HB, 3374G	1	
34	*AA97-80003A		ASSY-PCB, CONTROL	KG1, GXE1395, SMX, SEA	1	
	3404-000176	33609-101-003	SWITCH-TACT	12V, 50MA, 90-150GF, 6X6MM, S	7	
35	AA65-30016A	36635-001-910	CLAMP-D, COIL	NYLON, VO, NTR, DADH-360	2	
36	AA60-10017A	37124-100-830	SCREW-ASSY(CRT+CF)	WC, RH, M5, L35, SWRCH18A	4	
37	AA03-10001D	32019-400-083	CRT- COLOR	A34KQV42X, +380MG, 14", 90	1	
38	AA63-50200A	34003-0119-000	GRILLE-WOOFER, T	SECC, T0.5 PA110	1	
39	AA64-30698A	32001-0249-000	CABINET-TOP	HIPS, VO, BLK, 3374G	1	
40	AA42-10001C	34509-223-022	ANT- ROD	DP, 4S, 500MM, MT, UL	1	
41	6002-000514	37148-540-153	SCREW-TAPPING(TC+CB)	RH, 2, M4, L15, ZPC(BLK), SW	2	
42	6002-000514	37148-540-153	SCREW-TAPPING NG	RH, 2, M4, L15, ZPC(BLK), SW	4	
43			COVER			
44	*AA63-30154A		COVER-TOP, ASSY	DP, AA63-30105A	1	
45			SPEAKER-GENERAL			
46	6002-000514	37148-540-153	SCREW-TAPPING	RH, 2, M4, L15, ZPC(BLK), SW	4	
47	AA64-30916A		CABINET-BACK	DP, VO, AA64-30701A	1	
48	6002-000514	37148-540-153	SCREW-TAPPING(CB+CF)	RH, 2, M4, L15, ZPC(BLK) SW	4	
49	AA39-10002X	A6006-0253	POWER-CORD	KJ-10, SPT2, 2.4M, HOUS, UL	1	
50	● AA96-60363A		ASSY-H/S, SOUND(1C601)	TDA7266	1	
51	AA40-10005A		TUNER- F/S	TECC1880PK25B, NTSC/USA	1	
52	3722-000499	A3040-0198	JACK- RCA	9P(S), SN	1	
53	AA59-40002F	37179-0006-000	MODULE-RF SW	2GR-10UT, NTSC, USA	1	
54	● AA96-60042A	● 3Y82-20068-010	ASSY-H/S, VERT(Q401)	KSD5071YDI	1	
55	AA26-30002TI	A1201-0059	TRANS-FLY BACK	FCX-14B044, 14", 125V	1	
56	3704-000102	A3047-0021	SOCKET- CRT	10P, 22.5P, 14.3PI, SN	1	
57	AA65-30002A	33333-0005-010	CLAMP-FBT	NYLON-66, VO, BLK	1	
	AA65-30009A	36633-101-911	CLAMP-FBT	ABS, VO, BLK	1	
58	*AA97-10031D		ASSY-PCB, MAIN	TXE1395/UCX, KG1, USA	1	
59	● AA96-60368A		ASSY-H/S, POWER(1C602)	KA7631 SIP	1	
60	● AA96-60365A		ASSY-H/S, TRD810	FML-G22S 200v	1	
61	● AA96-20364A		ASSY-H/S, POWER(1C601)	STRS6701 CO	1	